


Note: Changing configuration settings other than those listed below, may result in complete and irreparable loss of device functionality and/or limited interaction with the Hueda application. Proceed at your own risk. Please refrain from changing configuration outside of the instructions below. If by any chance your device becomes non-functional, performing a factory reset may help recover your device.

Step 1:


Acquire Hueda device IP address from the Hueda application "Devices" tab.

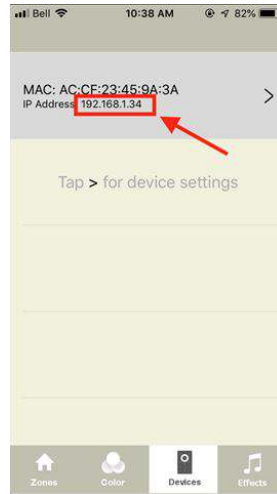

Step 2:

Open a web browser and in the navigation bar enter Hueda device IP address. For example, assume the IP address from step 1 was "192.168.1.34" the URL to navigate to is then "<http://192.168.1.34>".

You will be prompted with a username and password challenge. Use username "admin" and password "admin".

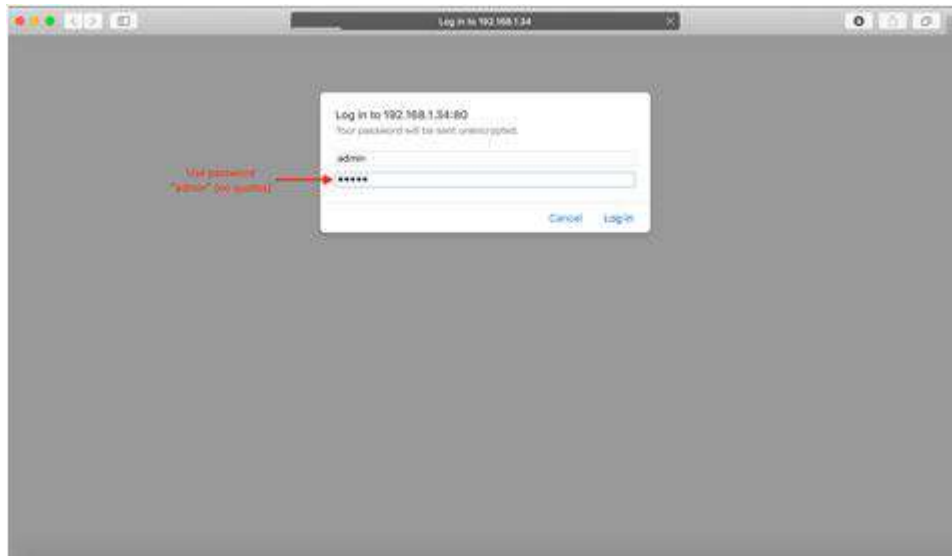

Set Static IP for HUEDA™ LW-2814DMX

Step 3:

At this point you should see something similar to the screenshot below. The page defaults to Chinese so click "English" to switch the language before proceeding.




Step 4:

Navigate to "STA Setting" tab.



Step 5:

On the "STA Setting" tab, set the "Obtain an IP address automatically" control to "Disable".

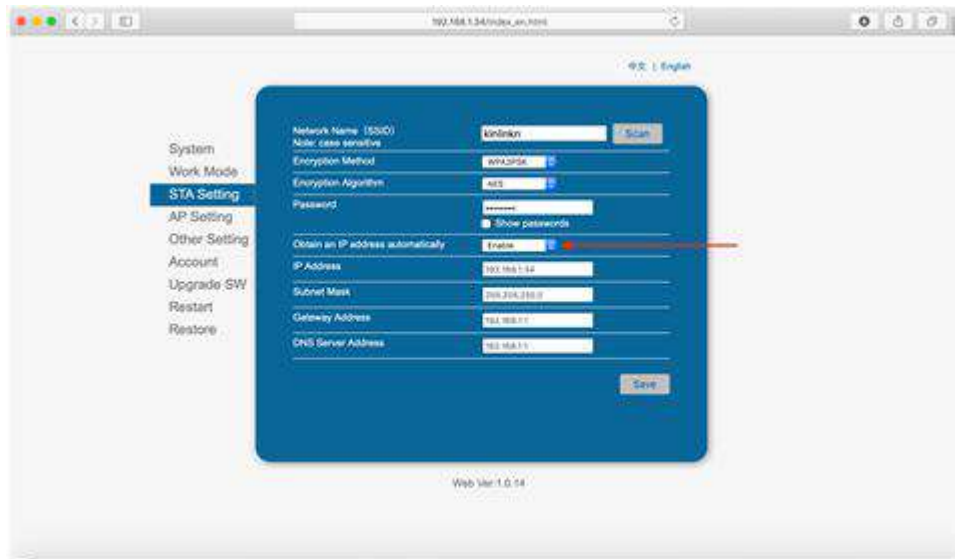

Step 6:

Change device IP address to desired value. In this case the IP address was changed from 192.168.1.34 to 192.168.1.20. Please ensure the desired IP address is available on the network and not taken by another device or Hueda functionality may be limited.

IMPORTANT: After changing the IP address click the "Save" button.

